



Unscrew these 5 pcs of screws highlighted on above photo on the bottom to open the housing




Open the housing






Tear off the rating label, and screw off to release the pump



Disconnect the hose from the housing

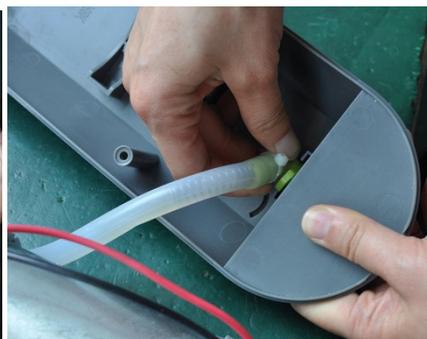

Disconnect the wire on pressure switch

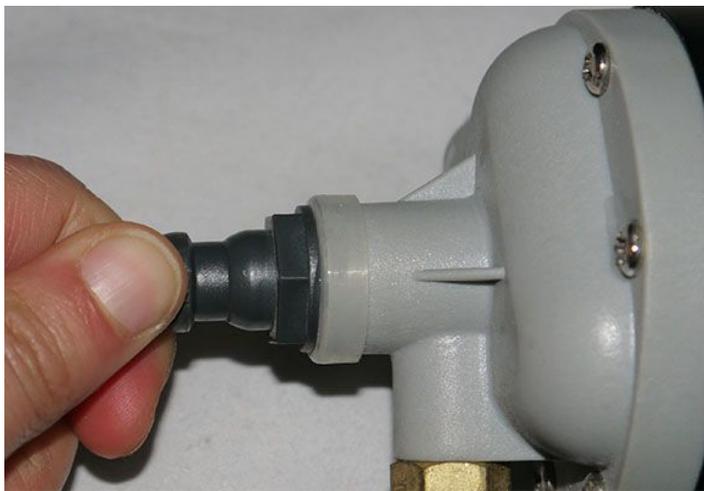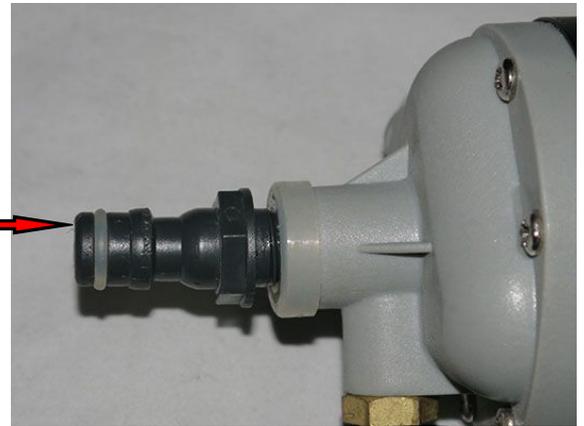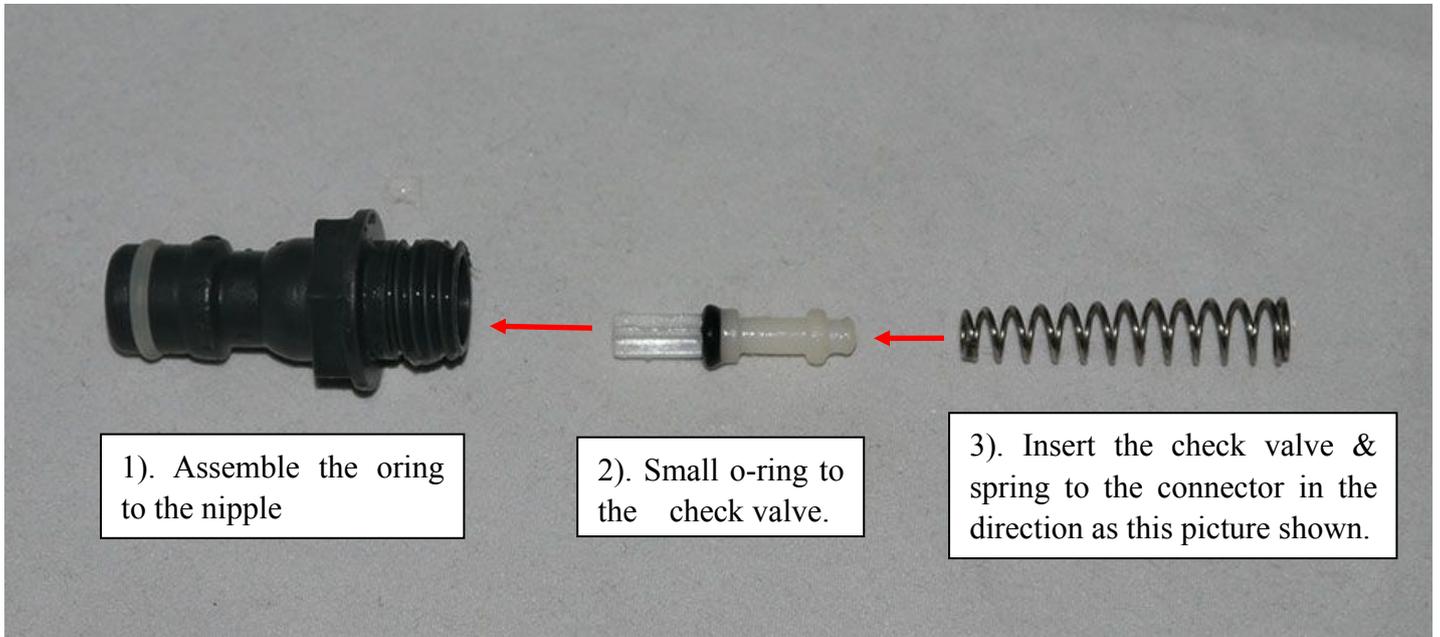

4). Screw the male connector to the female connector on the motor base. If it is not firmly, use a spanner.

