

UNIVERSAL DRIP TRAY FOR UX10 SERIES DISPENSERS **Installation Instructions**

1) Attach double sided tape to back of drip tray as shown in figure 1.

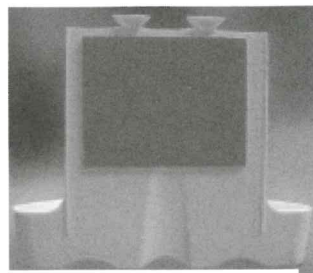


Figure 1

2) Position drip tray tabs into matching openings on dispenser backplate as shown in figure 2.

Note: Backplate is supplied with the dispenser or as a stand-alone item. It is not part of the drip tray kit.


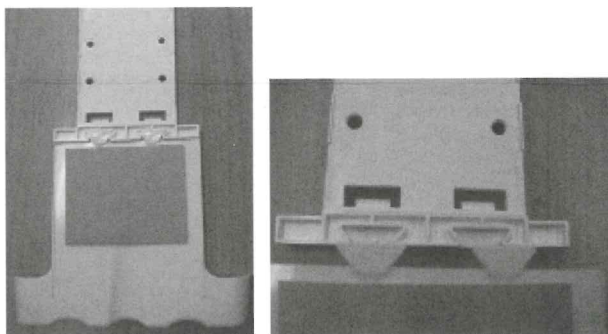


Figure 2

3) Using wipe provided, clean surface where drip tray is to be mounted. Remove tape backing paper and press drip tray and backplate to wall. Backplate may be taped or screwed to wall using fixing set provided with the backplate. If desired, use screw and anchor provided with drip tray for additional security. See figure 3.

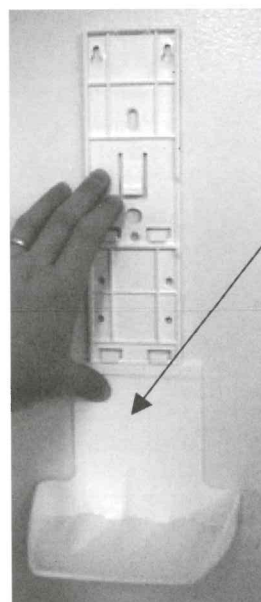

Use screw here for added security.

NOTE:

1) If drip tray is being retrofitted to an existing unit, carefully remove existing dispenser backplate from wall and replace with a new backplate configured to accept the drip tray. If the existing backplate is configured to accept the drip tray it may be re-used.

2) Typical backplate only depicted. Drip Tray is compatible with other style backplates in the UX10 dispenser series.

Figure 3